

INSTRUCTIONS

SAFETY WARNING: Remove all plastic fasteners and tags. These are part of the packaging and should be discarded.

SAVE THESE INSTRUCTIONS — This manual contains important safety and operating instructions for power units.

WARNING

ELECTRIC PRODUCT. Keep away from children. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electric shock. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

WARNING

Strobe lights have been known to trigger seizures in people with photosensitive epilepsy.

WARNING

The light is very bright. Do not shine directly into eyes.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING (THIS FURNISHING)

WARNING: TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS :

READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

1. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
2. Do not let lamps rest on the supply cord or on any wire.
3. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
4. Do not cover the product with cloth, paper or any material not part of the product when in use.
5. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
6. This seasonal use product is not intended for permanent installation or use.
7. Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
8. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
9. This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
10. Do not use this product for other than its intended use.
11. Do not hang ornaments or other objects from cord, wire, or light string.
12. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
13. This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace.
14. Read and follow all instructions that are on the product or provided with the product.

CAUTION: To reduce the risk of fire and electric shock:

1. Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal.
2. Do not mount or support wires in a manner that can cut or damage wire insulation.

SAVE THESE INSTRUCTIONS.

ASSEMBLY INSTRUCTIONS

1. Gently remove contents from packaging and lay out in a clear area.
2. Secure the stake with handle together. Insert the stake into the ground. (See illustration 1)

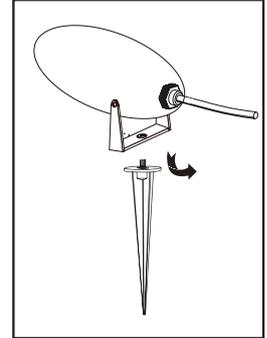


Illustration 1

3. Plug power cord into standard wall socket. (See Illustration 2)
4. Unplug when not in use.

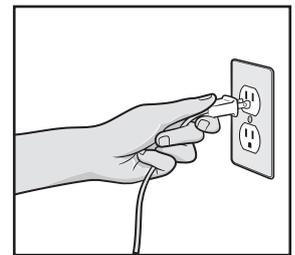


Illustration 2


USER SERVICING INSTRUCTIONS

Fuse Replacement (Fuse: 2pcs)

WARNING: Risk of Fire: Replace only with same size and type of fuse.

WARNING: Risk of Fire: Do not replace the attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if attachment plug is damaged.

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on the cord.
2. Open fuse cover. Slide open the fuse access cover on top of the attachment plug towards blades. (See illustration)
3. Remove fuses carefully.
4. Replace fuse only with 5 Amp Max, 125 Volt fuse (provided with product)
5. Close the fuse cover. Slide closed the fuse access cover on top of the attachment plug.

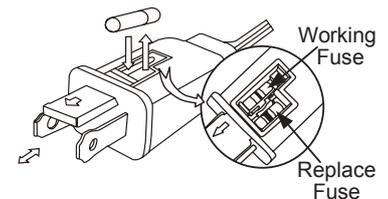

OPERATING INFORMATION

This product was designed for indoor and outdoor use.

Do not shake the device. Avoid brute force when operating the device.

Keep away from direct and excessive heat sources.

Do not permit operation by unqualified persons. Damages are usually the result of unprofessional operation.

Never use solvents or aggressive detergents in order to clean the device. Rather use a soft and damp cloth.

Please use the original packaging if the device is to be transported.

Unauthorized modifications on the device are unacceptable due to safety reasons.

If this device is operated in any way different from the ways described in this manual, the product may suffer damages and the guarantee becomes void.

OPERATION

- Insert the plug into socket.
- Adjust staked projector to display in desired location.
- Unplug when not in use. Use caution with power cord.

WARNING

- The device is for indoor and outdoor use.
- Please keep away from heaters and other heating sources.

IMPORTANT

Damage caused by the disregard of this user manual are not under warranty. The dealer will not accept liability for any resulting defects or problems. Keep away from heaters and other heating sources. If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. Leave the device switched off until it has reached room temperature. Please note that damage caused by manual modifications on the device or unauthorized operation by unqualified persons are not under warranty. Keep young children away from the device.

USE AND CARE INSTRUCTIONS

1. When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
2. If the product is placed on a tree, the tree should be well secured and stable.
3. Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
4. When storing the product, carefully remove the product from wherever it is placed, to avoid any undue strain or stress on the product conductors, connections, and wires.
5. When not in use, store neatly in a cool, dry location protected from sunlight.

CAUTION

1. For temporary (90 days max.) installation and use only.
2. To reduce the likelihood of excessive heat and possible damage, use only decorative lamp accessories packaged with this product or marked for use with this product.
3. To reduce the risk of fire or electric shock, do not attempt to replace lamps or modify wiring or product.
4. This is an electric product-not a toy. To avoid risk of fire, burns, personal injury and electric shock it should not be played or placed where small children can reach it.
5. Do not connect to another lighting string, decorative outfit or seasonal product.
6. Always unplug this product before installing or replacing fuses.

WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

THESE INSTRUCTIONS ARE FOR THESE ITEMS

89629	88972	88619	88610	88579	87549	87524
83344	83334	82556	75649	74760	74316	74297
74281	74145	74144	74130	74025	74024	74022
73766	73601	73600	73172	73043	72120	71921
71402	71386	70884	59931	59929	59928	59775
59444	59256	58889	58453	57423	57418	57267
56777	56372	56368	56366	56351	54178	49629
49592	49584	49181	49180	49178	49176	48553
48552	48551	48539	48538	48537	48485	48482
48463	48365	48354	48240	48239	48238	47454
47008	47007	47006	40698	40025	40019	39631
39630	39629	39628	38693	38482	38481	38224
37886	37768	37571	37564	36501	36469	36468
35864	35863	35624	35589	35488	35279	35074
35072	31599	19918	18313	18211	16669	14112
13847	13773	445029	445001	330034	224106	224057
224055	224054	224022	224021	224020	224019	224016
224015	224013	224011	224010	223979	223931	223930
223929	223928	223927	223926	223850	223849	223848
223847	223846	223777	223708	223707	223706	223705
223704	223703	223702	223701	223700	223699	223698
223697	223696	223693	223676	223675	223674	223673
223672	223671	223670	223669	223668	223667	223666
223665	223664	223663	223662	223594	223376	223375
223372	223357	223356	223271	223231	223027	223026
223025	223011	223010	223009	223008	223007	223006
223005	222924	222924	222610	222585	222514	222513
222510	222508	222476	222368	222021	221675	221633
221561	221560	221481	221135	221134	221133	221131
220878	220865	220846	220833	220823	220822	220821
220806	220805	220804	220694	220355	220354	220158
220157	220156	224217	224216	224404	223681	223680
223679	223678	224789	224788	224787	224786	224785
116588	117004	116462	116461	116460	116458	116457
116254	116253	116252	116251	116250	116249	116248
116232	116231	116230	116229	116228	116227	116226
116210	116191	116190	116189	116188	116187	116186
116185	115392	115124	115122	115121	115120	115119
115118	111445	110570	110569	110568	110567	110562
116670						

Visit WWW.GEMMY.COM for more information.

©2019 GEMMY INDUSTRIES CORP.
117 WRANGLER DRIVE, SUITE 100
COPPELL, TX 75019 U.S.A.

1 (800) 274-6717
MADE IN CHINA
PRINTED IN CHINA

