




ASSEMBLY AND INSTALLATION INSTRUCTIONS

PD55436 / PD55536 / PD55636 / PD55736

WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.

**NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.**

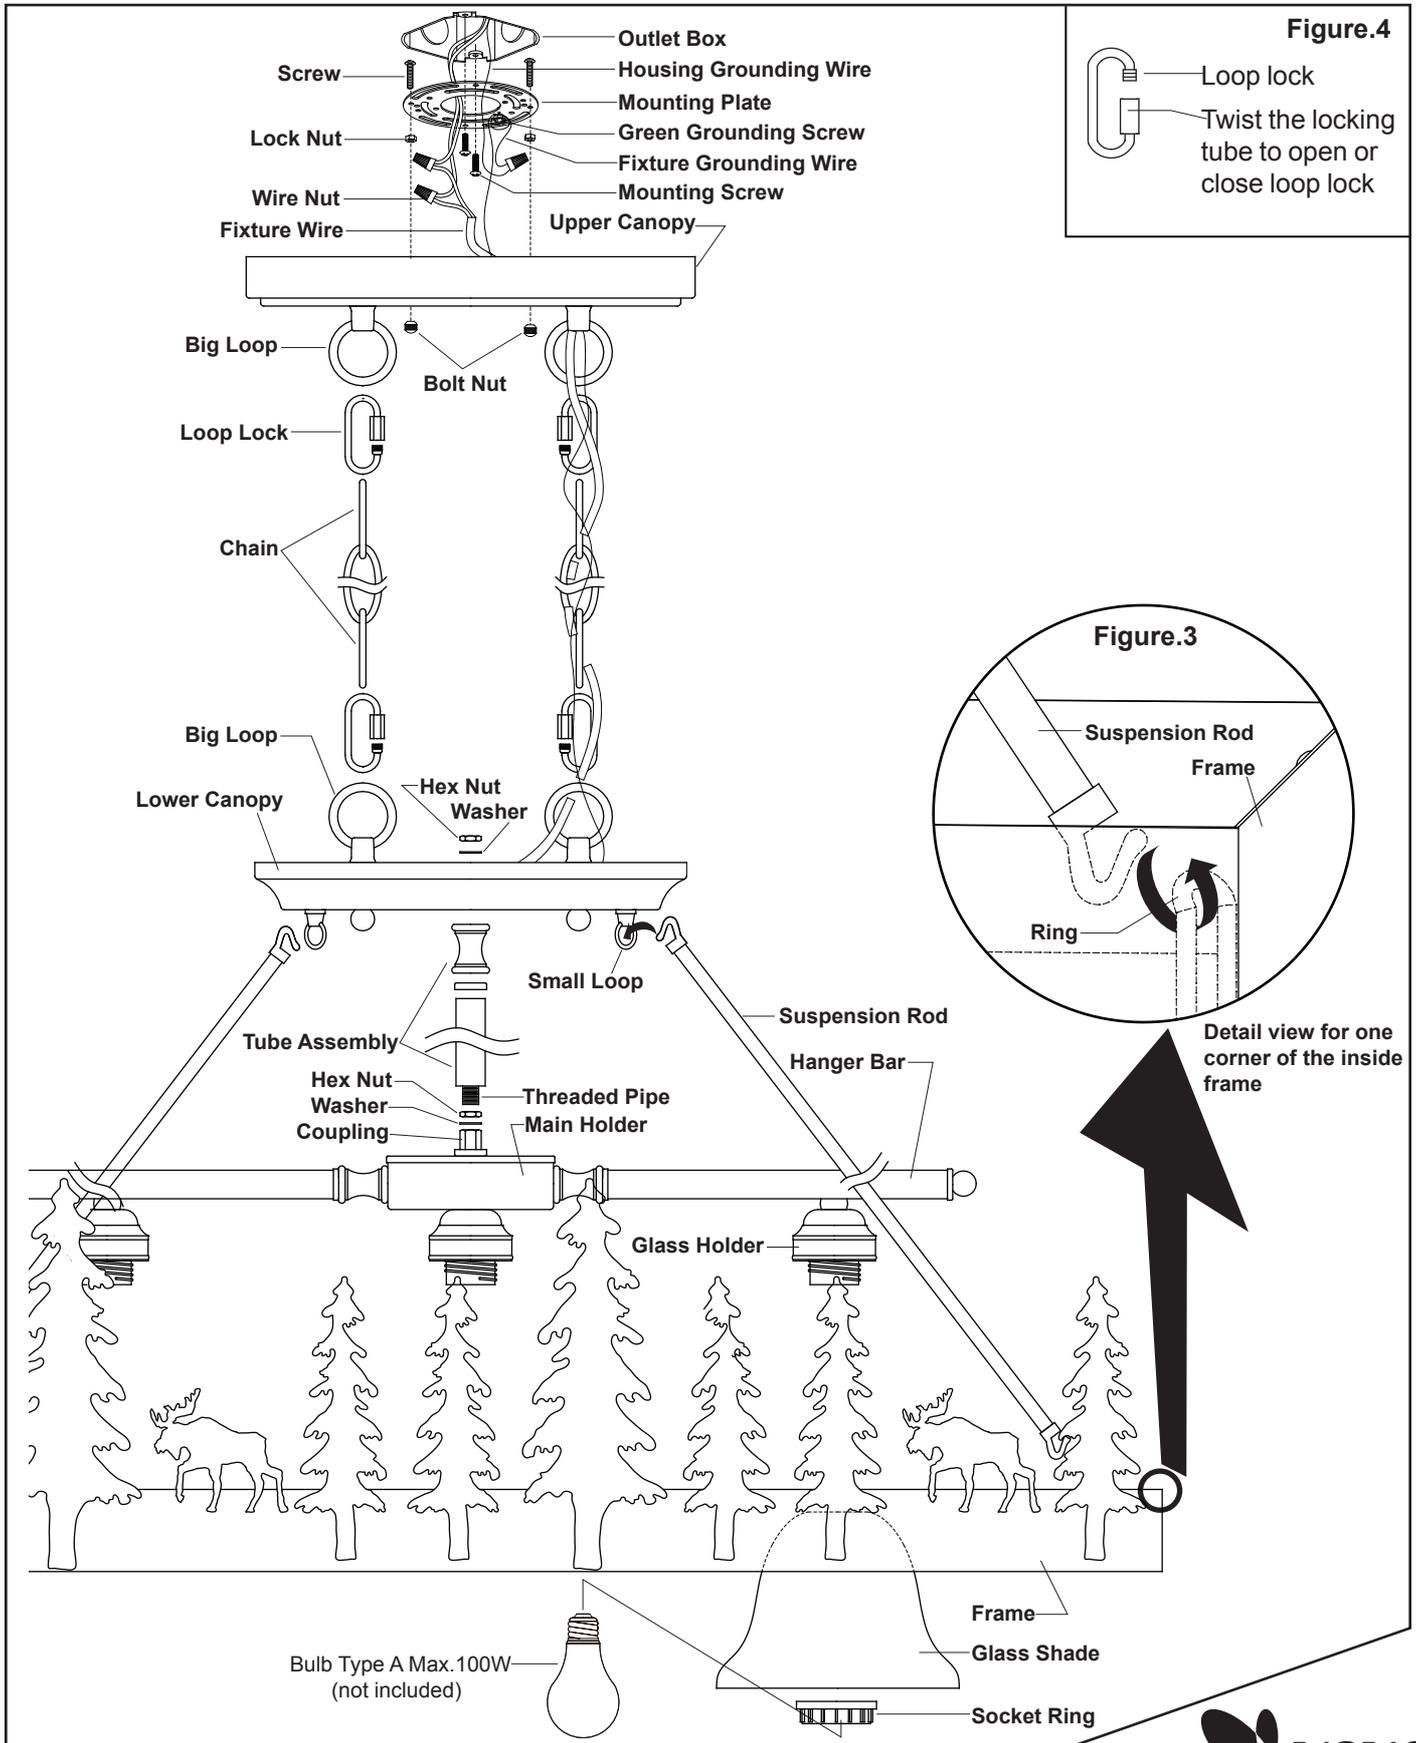

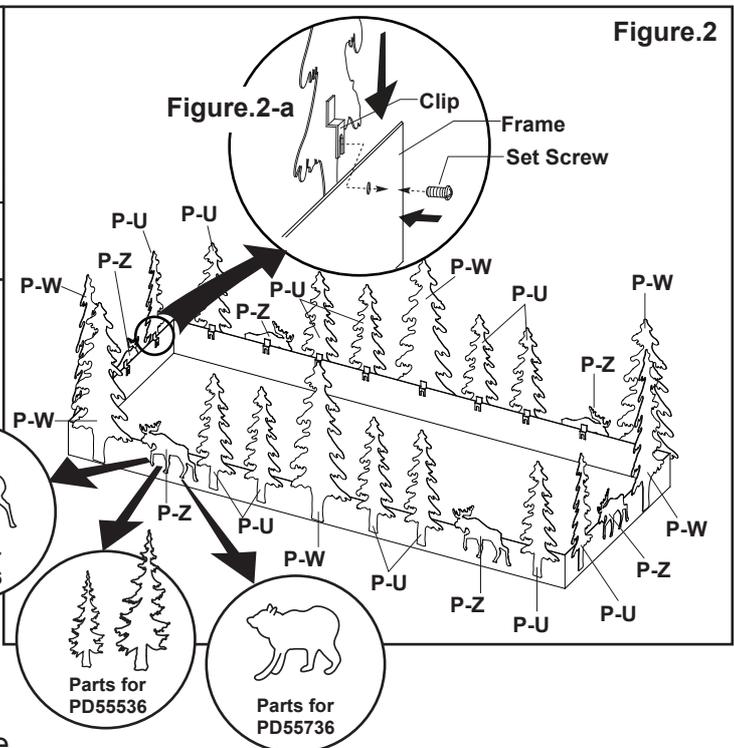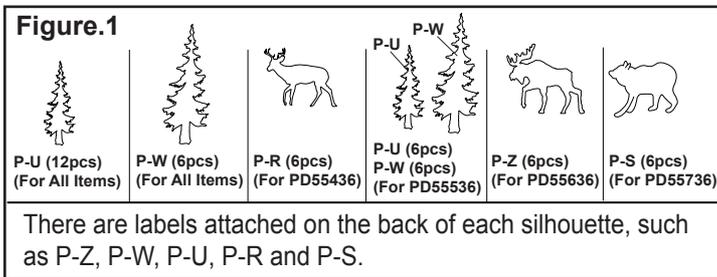

1. Install the silhouettes onto the frame.
(See Figure 1 & 2)
 - a. Take a silhouette and place it onto the frame with the hole in the frame aligning the slot in the clip of the silhouette, secure it with a set screw. (See Figure 2-a)
 - b. Repeat with the other silhouettes.
 - c. There are labels attached on the back of each silhouette, such as P-Z, P-W, P-U, P-R and P-S. Please follow the sequence shown in Figure 2 to install the silhouettes onto the frame.
 - d. You can install the silhouettes which marked P-R (for PD55436) or marked P-S (for PD55736) or marked P-U & P-W (for PD55536) to the location of silhouettes which marked P-Z (for PD55636) shown in Figure 2 to replace them.
2. Screw the threaded pipe into the coupling of the main holder, secure it with a washer and hex nut. Then slide the tube assembly and lower canopy down through the threaded pipe and secure them with a washer and hex nut.
Note: Make sure to keep the lower canopy parallel to the hanger bar.
3. Thread two screws through the mounting plate, and secure them with two lock nuts. Adjust the length of the screws if necessary.
4. Attach the mounting plate to the outlet box by using two mounting screws.
5. Choose the length of the chains you need and adapt both chains to this length.
6. Take one loop lock, open the locking tube, then hook it onto the big loop of the upper canopy and onto one end of the chain. Close back the locking tube of the loop lock. (See Figure.4)
7. Take another loop lock, open the locking tube, then hook it onto the big loop of the lower canopy and onto the other end of one chain. Close back the locking tube of the loop lock. (See Figure.4)
8. Repeat steps 6~7 to connect the another chain to the upper canopy and lower canopy.
9. Thread the fixture wires and fixture grounding wire through one of the chains and out from the upper canopy.
10. Cut any excess fixture wires and fixture grounding wire. Slit the two fixture wires apart in 5 inches. Peel off insulation of the two wires in 5/8 inch.
11. Pull out the house supply wires and the house grounding wire from the outlet box. Make wire connections using the wire nuts:
 - The smooth wire (marked) from the fixture to the black wire from the power source.
 - The ridged wire (unmarked) from the fixture to the white wire from the power source.
 - Attach the fixture grounding wire to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with a wire nut.
 Carefully put the wires back into the outlet box.
12. Raise the upper canopy against the ceiling, with the screws located on the mounting plate protruding from the holes in the upper canopy, secure it with two bolt nuts.
13. Take a suspension rod and hook one end onto the small loop of the lower canopy and hook another end onto one ring located at a corner of the inside frame. (See Figure 3)
Repeat with the other suspension rods.
14. Attach the glass shades onto the glass holders, then secure them with socket rings.
15. Install bulbs (not included). See relamping label at socket area or packaging for maximum allowed wattage.
16. Turn on the power at the main fuse or circuit breaker box.