

ITEM #0693230/0693231

styleselections®


Style Selections® is a registered trademark of LF, LLC.
All Rights Reserved.

VANITY WITHTOP

MODEL #LW153C14-W/LW153C14-B

Français p. 6

Español p. 11

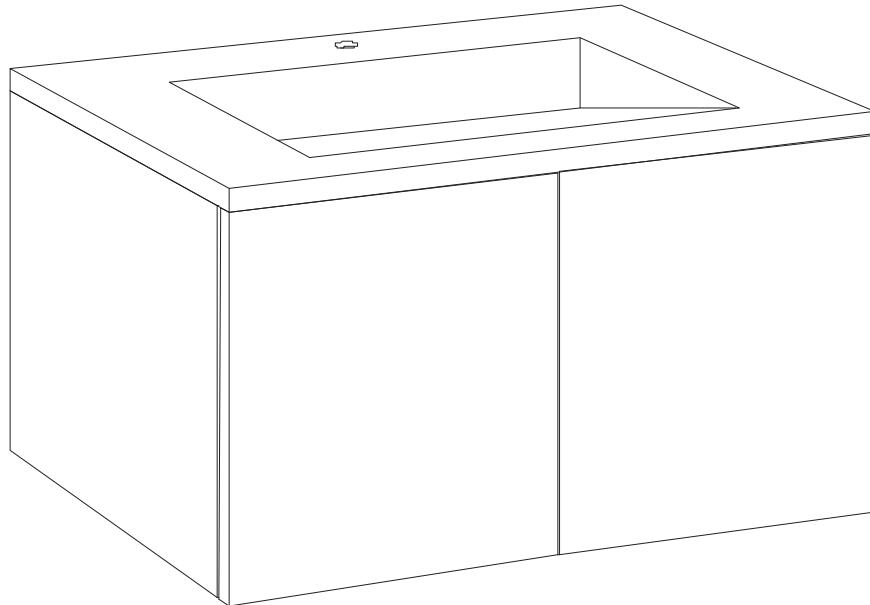

ATTACH YOUR RECEIPT HERE

Purchase Date _____




Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-877-888-8225, 8 a.m. - 8 p.m., EST, Monday - Friday.

xxxxxx

Lowes.com


styleselections

PACKAGE CONTENTS

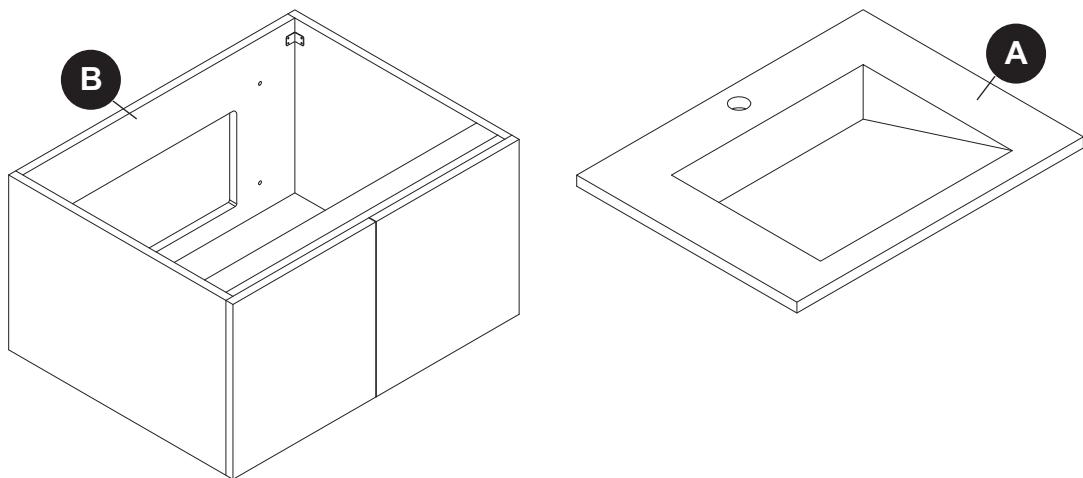


Part	Description	Quantity
A	Top	1
B	Vanity cabinet	1

 HARDWARE CONTENTS (shown actual size)

AA

Screw

 Qty . 4

BB

Anchor

Qty . 4

CC

Template
(not shown actual size)
Qty . 1



SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING: The assistance of another person may be required to help install this unit.

CAUTION: Take care when moving the product and never drag the pieces across the floor as this will cause damage to the joints. Be careful not to drop anything hard or heavy onto the surface or corners of the sink.

PREPARATION

Before beginning installation of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.


Estimated Assembly Time: 30 minutes

Tools Required for Assembly (not included): Sealing compound, Liquid nail-type construction adhesive, Phillips screwdriver.

Helpful Tools (not included): Carpenter's level.

ASSEMBLY INSTRUCTIONS



1. Place template (CC) on the wall use it as a guide to determine the insertion points of the anchors (BB). Use a pencil (not included) to ensure cabinet (B) will be level.

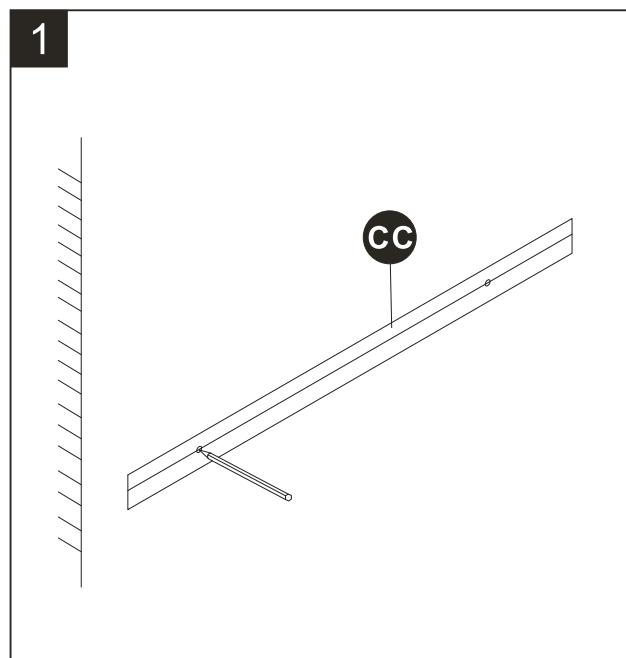

ASSEMBLY INSTRUCTIONS


2. Use a 3/16 in. drill bit (not included) to drill 1/4 in. pilot holes at marked locations. Insert anchors (BB) into the holes until the flanges on the anchors (BB) are flush against the wall.

Hardware Used

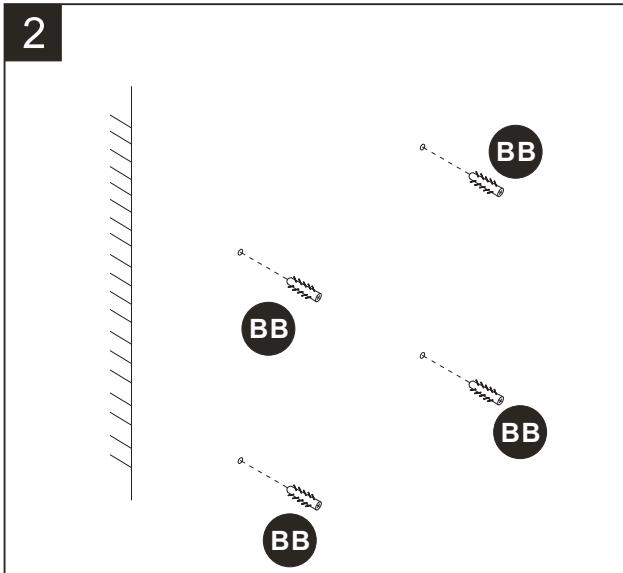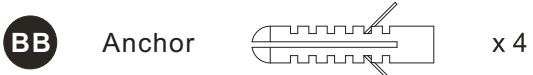

3. Insert screws (AA) through holes of vanity back into anchors (CC) tighten securely.


Hardware Used

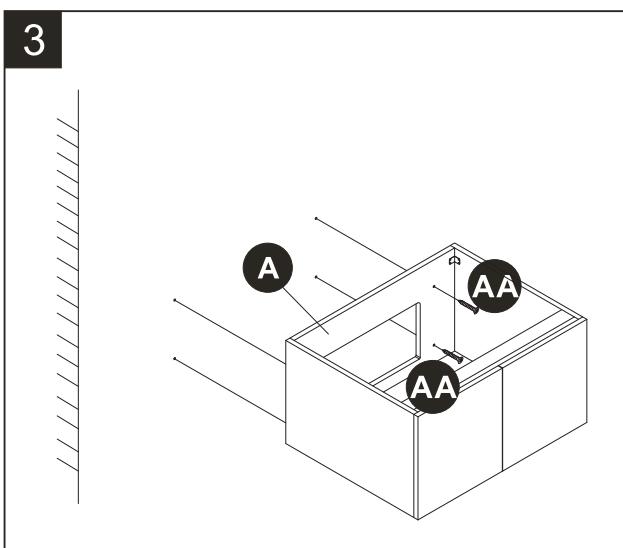

4. Use a construction adhesive (not included) to attach the top (B) to vanity (A).

Note: It is recommended you obtain appropriate recommendations from local hardware supplier on adhesive and caulking.

Note: The gap between the doors can be change by making adjustments to the preassembled hinges with a Philips screw clockwise. To increase the gap between the doors, turn the screw counterclockwise.

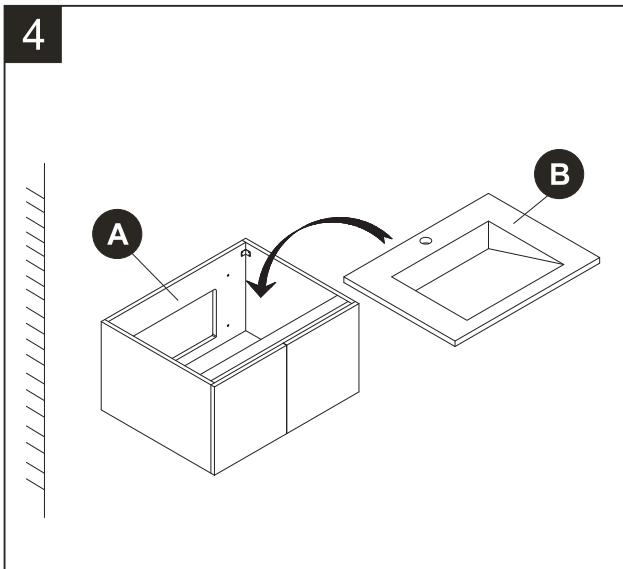

CARE AND MAINTENANCE

Dust frequently with a clean, soft, dry, lint-free cloth. Use only polishes that contain detergents, emulsifiers and mineral oil. Avoid using silicone cleaners and waxes. Clean up excess water and spills immediately. Water left over a long period of time will cause white spots in the finish.

WARRANTY


The manufacturer warrants this product to be free from defects in workmanship and material present at time of shipment from the factory for a limited lifetime from the date of purchase. This warranty applies only to the original purchaser. To obtain warranty service, call our customer service department at 1-877-888-8225 or return authorization and shipping instructions. Any damage to the product by accident, misuse or improper installation, or by affixing accessories not produced by the manufacturer are the purchaser's responsibility. The manufacturer assumes no responsibility whatsoever for product installation during the warranty period. There is no further expressed warranty. The manufacturer disclaims any and all implied warranties. The manufacturer shall not be liable for incidental, consequential or special damages arising at or in connection with product use or performance except as may otherwise be accorded by law. This warranty supersedes all prior warranties.

REPLACEMENT PARTS


For replacement parts, call customer service at 1-877-888-8225, 8 a.m. - 8 p.m., EST, Monday-Friday.

Part	Description	Part Number
AA	Screw	1501
BB	Anchor	1502

AA

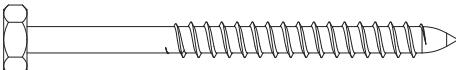

BB

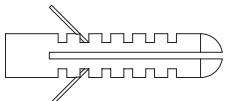

Printed in China

Style selections® is a registered trademark of LF, LLC.
All Rights Reserved.

Lowes.com

styleselections