


Roughing-In Dimensions / Mesures Relatives aux Points de Raccordement / Medidas Aproximadas

UNITS IN INCHES (") / UNITES EN POUCES (") / IMODADES EN PULGADAS (")

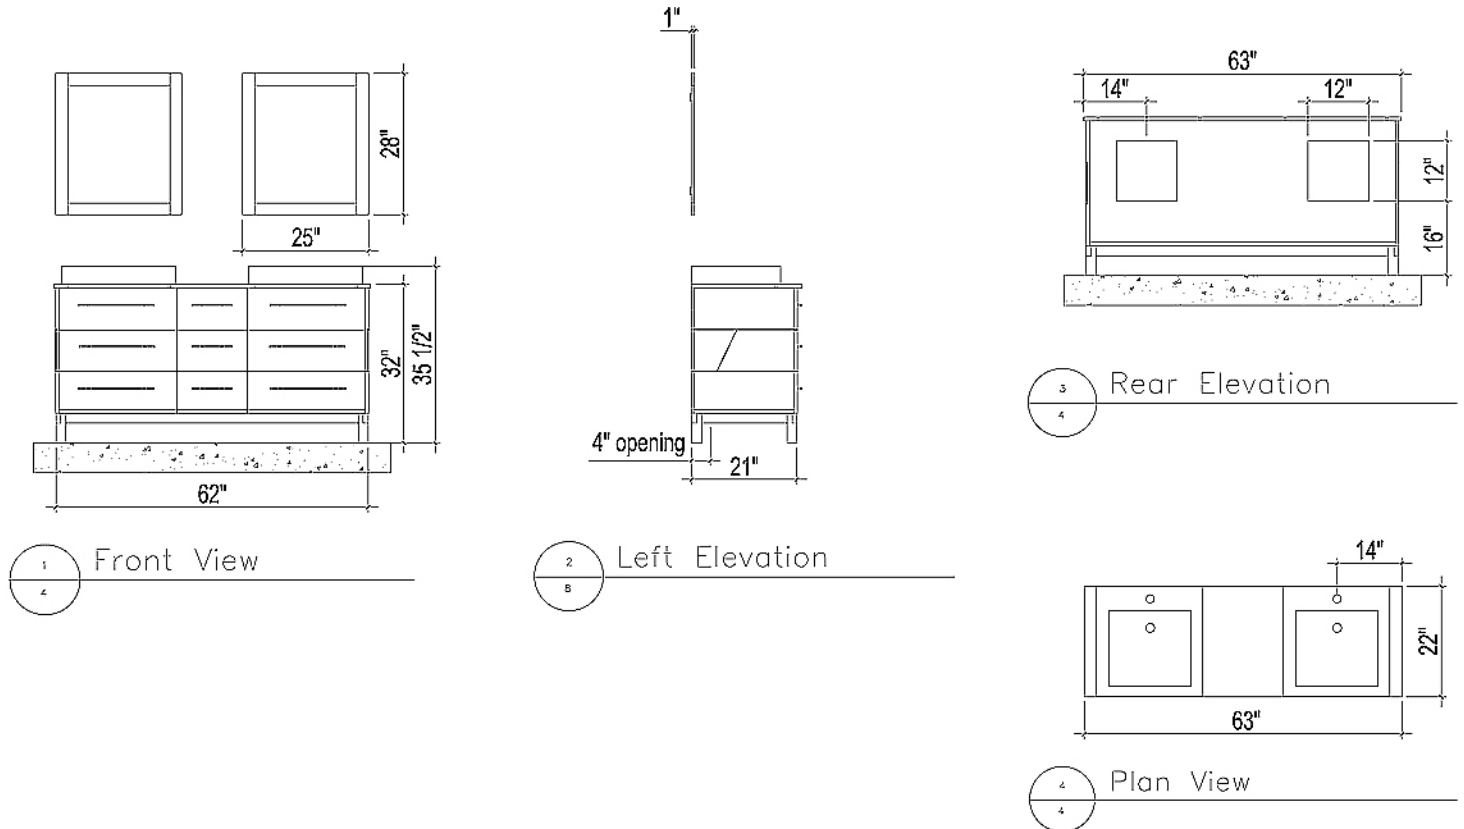

Note: Height may vary depending on material of top
 Note: La hauteur peut varier en fonction du matériau du top
 Nota: La altura puede variar dependiendo del material de los mejores



Recommended Accessories / Accessoires Recommandés / Accesorios Recomendados

- | | | | | |
|-----------------|------------------------|------------------|--------|---------|
| - Grada Tower | - Andro Faucet | - Recline Faucet | - SS8 | - SS12 |
| - Curviz Faucet | - Robo Straight Faucet | - Bamboo Faucet | - MC22 | - MCG24 |

STEP #1

- With assistance, place vanity (A) in desired location and level.
- It is recommended to locate at least one wall stud within area where vanity (A) is to be installed. Pre-drill holes through wall studs. Using wood screws, fasten vanity to wall stud.
- NOTE: Wood screws are not provided. Refer to Figure #1.

Customer Service: 1.866.856.1777
 info@spabathe.com