PACIFICO

WAINSCOT

204700-8

PRIMED MDF WAINSCOT

Sleek design with exposed groove that blends with any decorating style.

READY TO PAINTFAST AND EASY INSTALLATION

HORIZONTAL OR VERTICAL APPLICATION

CONTAINS

4 pieces per package

COVERS

20.36 sq.ft. per package

1/2" X 7-7/8" X 8'

STEPS FOR INSTALLING PACIFICO wainscot

Necessary tools and materials for wainscot installation:

- Finishing nails
- Wood glue
- Gun-nailer
- Miter-box saw or circular saw
- Tape measure
- Level (if necessary)

Before installing your wainscot, open the packages and let stand for at least 72 hours for product to reach room temperature.

INSTALLATION

1 A For **horizontal application** of wainscot, start installation by orienting the first series of wainscot boards female side towards the bottom.

B For **vertical application** of wainscot, start installation from one of the corners of the room, female side oriented towards the corner.

2 To attach the boards, we recommend that you first apply wood glue to the back of each board and add finishing nails to the board surface to attach firmly.

3 Repeat with other boards by inserting the male parts in the female parts. For cutting, take measurements board by board. This will allow you to adapt the length of the board to any eventual unevenness, and avoid any errors around openings.

4 Camouflage holes with wood filler and apply finishing paint.

FINISHING

Bottom of walls

Be sure to leave a space at ground level to prevent dimensional variations due to humidity. Finalize installation with Boulanger baseboards at bottom of walls, if desired.

Ceiling

Be sure to leave a space between the wainscot and ceiling to prevent dimensional variations due to humidity. Finalize installation with crown mouldings, quarter rounds, or Boulanger coves, if desired.

Interior and Exterior corners

VERTICAL INSTALLATION

- Interior corners: Cut at a 45° angle (A) and/or insert male and female parts into each other. (B)
- Exterior corners: Cut at a 45° angle (A) and/or subtract male part from piece (C) and/or add a finishing moulding.

Joints

HORIZONTAL INSTALLATION

Interior and exterior corners: Cut at a 45° angle (A) and/or add finishing moulding.

For a better finishing of joints, we recommend cutting your pieces at a 45° angle.

RECOMMENDATION: Given that wainscot has a ½ inch thickness, we recommend matching with frames at least ½ inch in thickness.

CAUTION

PACIFICO wainscot is not recommended on ceilings because of the weight of the materials.

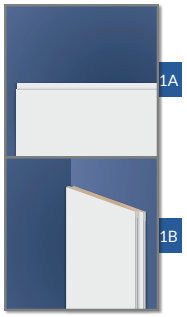

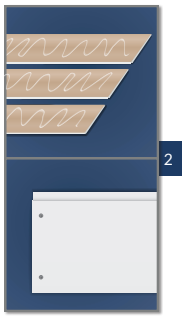

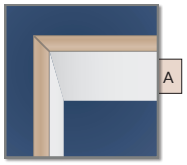

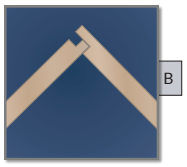

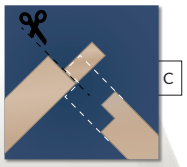

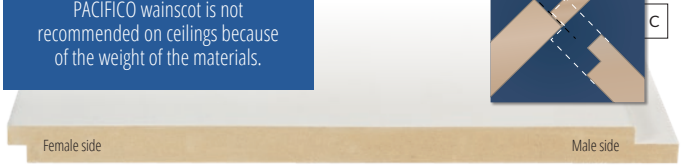

www.boulanger.ca

Made and distributed by BOULANGER

Roland Boulanger & Cie ltee
235, St-Louis, Warwick (QC) Canada J0A 1M0